


sentai

Alexa Skills and Routine Troubleshooting Guide
V1.0 Feb 2022

Step 1


Select More

Bottom right-hand corner

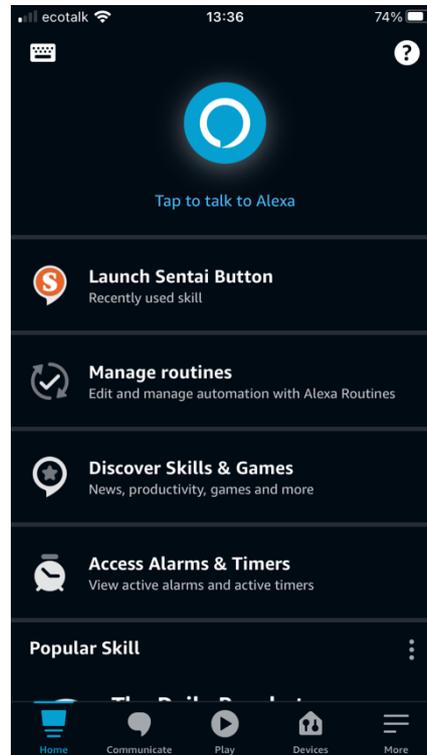

Step 2


Select Skills & Games

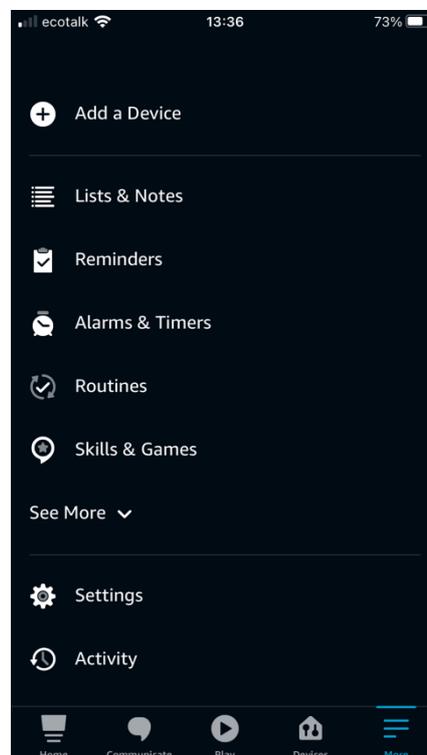

Step 3

Select Your Skills


The select the search icon magnifying glass in the top right-hand corner of the screen

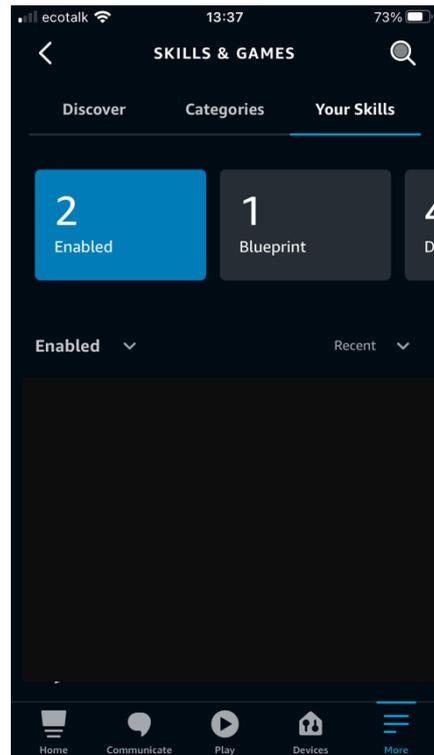

Step 4


Type Sentai and search – there will be two matching results

Select Sentai Button

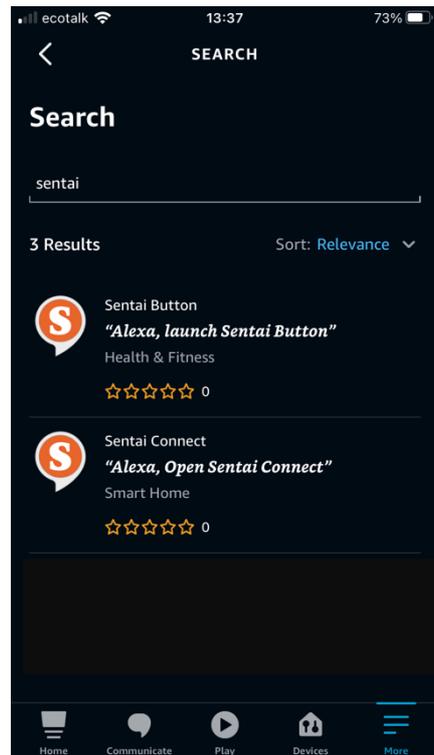


Step 5

Select Launch and then select your echo dot when it appears

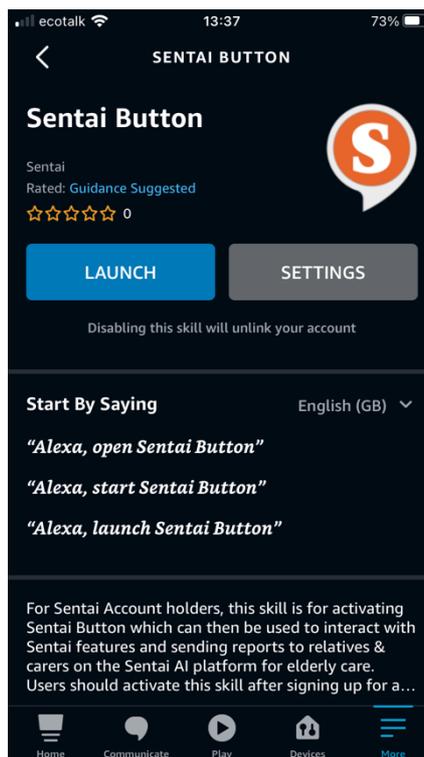


Step 6

Then select Settings and link your account – please use the email and password you have used for your Sentai account

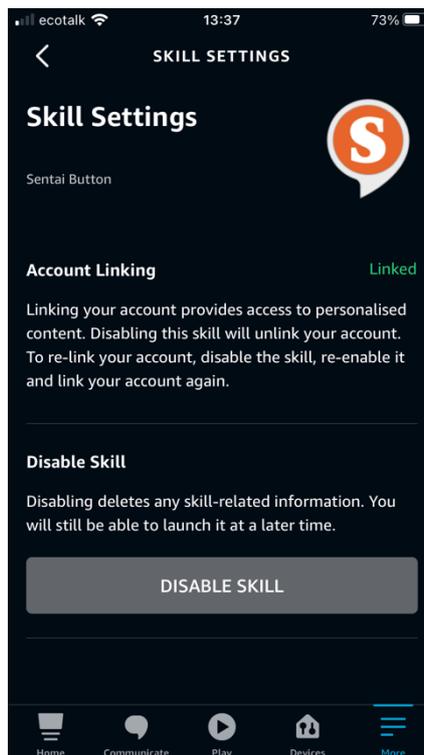


Step 7

Go back to the search screen and then select Sentai Connect and repeat the process. You may not need to add your email/password but if you do please ensure you use the email and password you have used for your Sentai account again

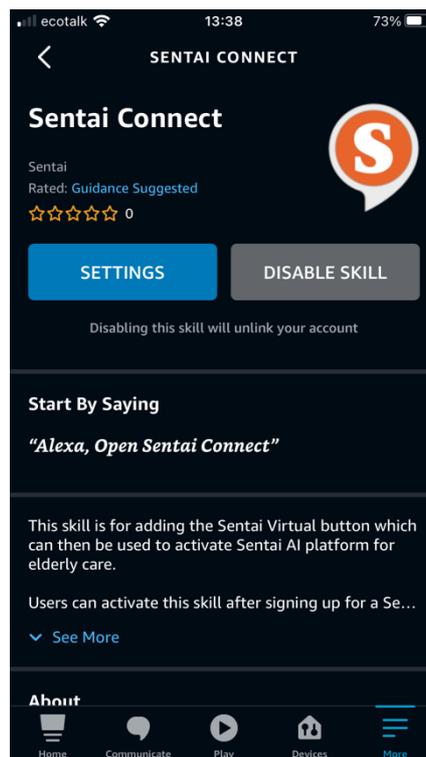


Step 8

Now select More again and this time select Routines

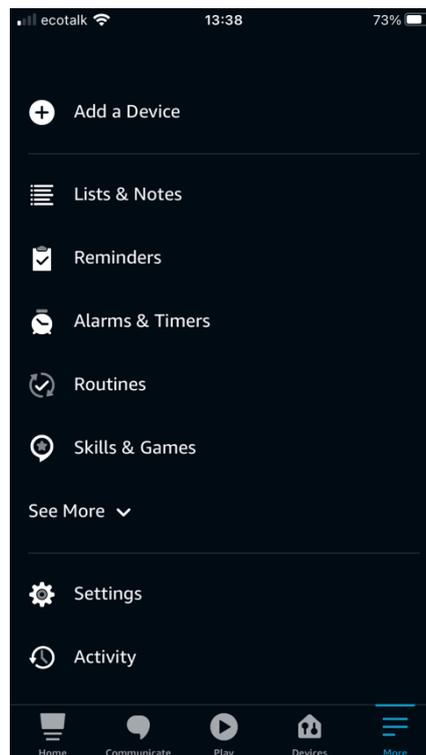


Step 9

Select the + icon in the top right hand corner of the screen to create a new Routine

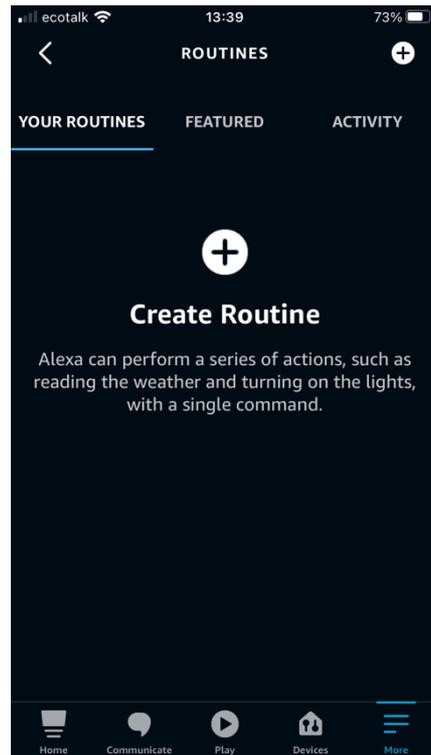


Step 10

Select Enter routine name

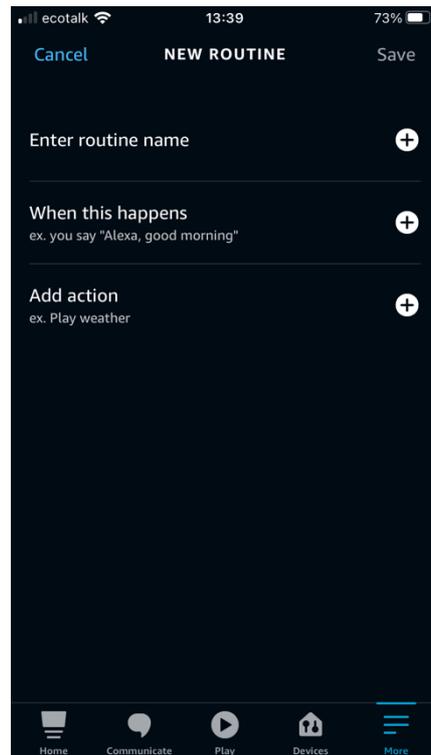


Step 11

Type Sentai button and select Next

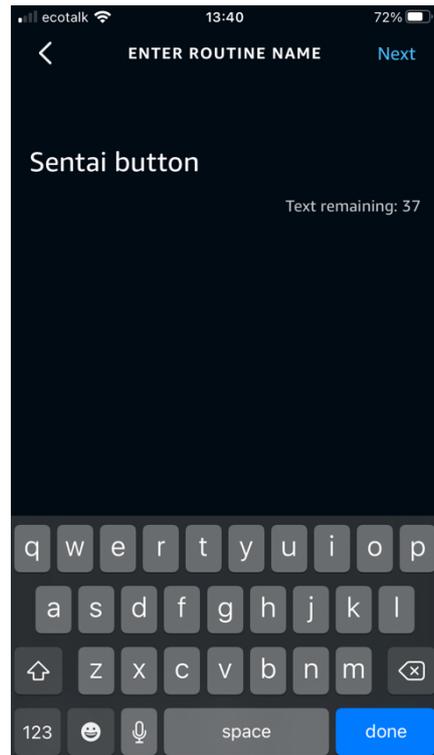

Step 12

Select Smart Home

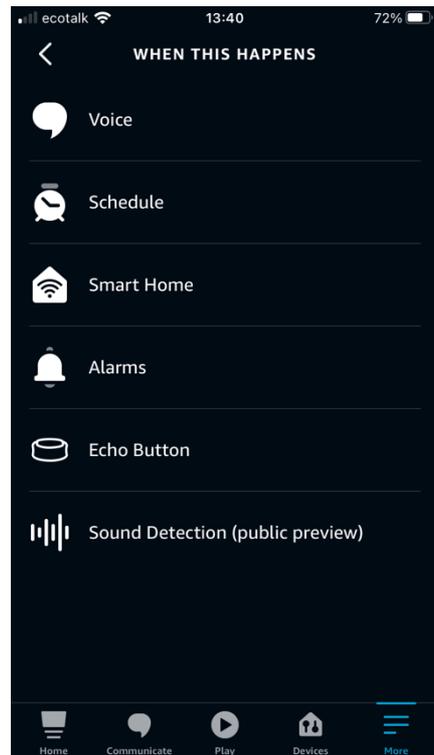

Step 13

Select Sentai Button



Step 14


Select Save



Step 15


This is what you should now see

Select Add action

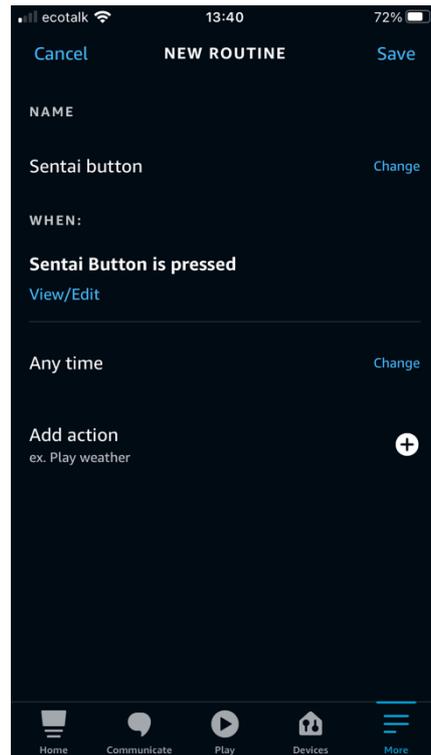


Step 16

Select Customised

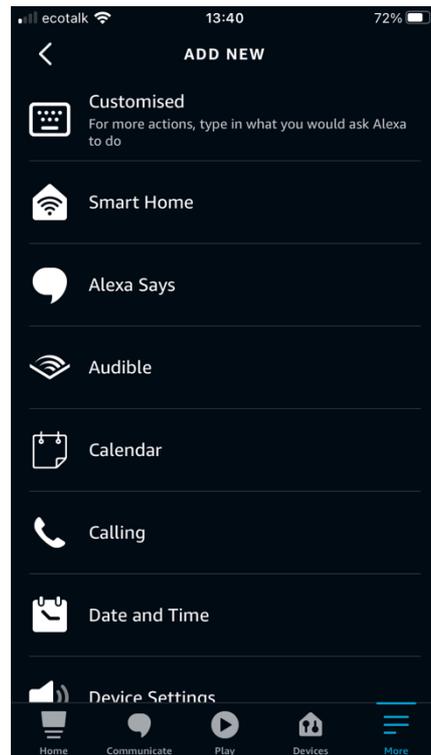


Step 17

Type Open Sentai button and select Next

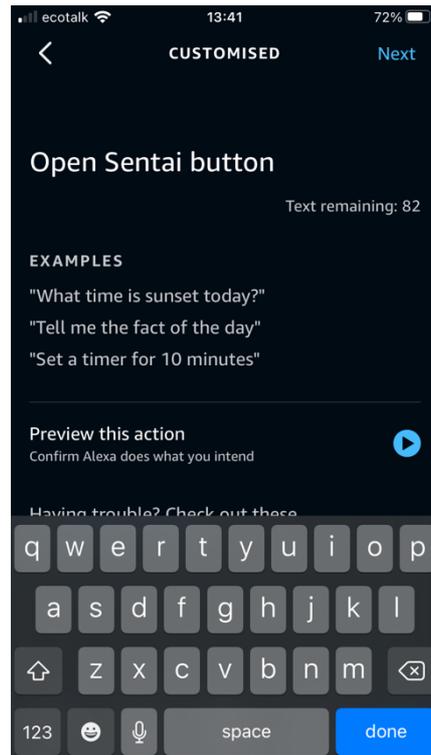


Step 18

Select Choose Device

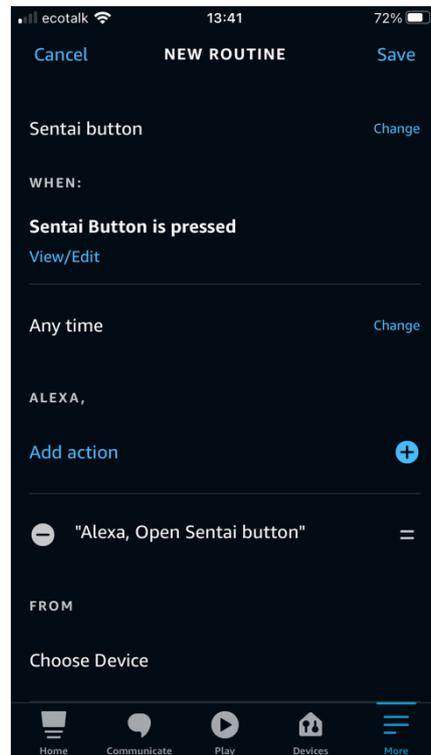

Step 19


Select the right Echo Dot

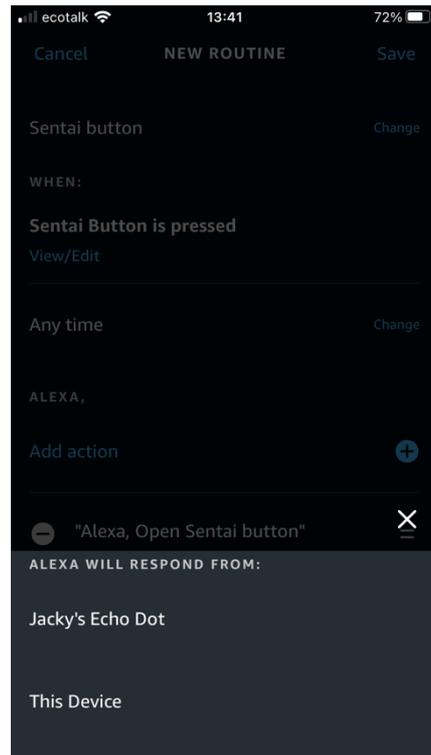

Step 20

This is what you should now see.

Select Save in the top right-hand corner of the screen

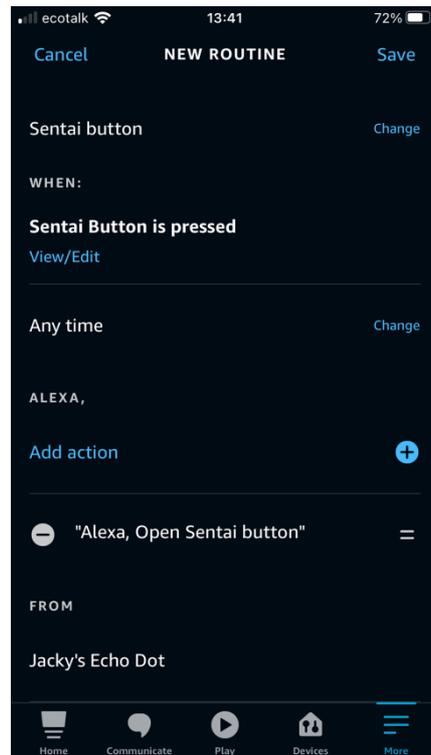

Step 21

Your Routine should be created successfully

